



Prepare Setting the recording format

Set the recording format and bit rate.

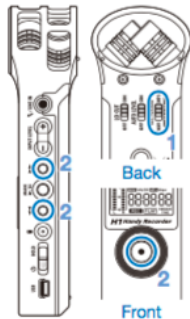

1. Select MP3 or WAV format.
2. Use ◀ and ▶ to select the bit rate and press .

- The screen shows the remaining recording time for the current bit rate.

MEMO

Since the MP3 format uses data compression, its sound quality is not as good as WAV format, but it uses less microSD card capacity. For both formats, higher rates provide higher quality.

Operate Play

Play back recorded audio.




- Press ▶/|| to play the last recorded file.

- The remaining playback time appears on the screen.



- Main button functions during playback

- ◀▶▶ . . . Press during playback to select files
- ▶/|| Press to pause/resume
-  Press to return to the home screen


MEMO

Playback automatically stops after all files have been played.

Operate Recording


After turning on the unit, you can start recording from the home screen with the press of one button.



1. Press  to start recording.

- The recording time appears on the screen.




2. Press  again to stop recording and return to the home screen.


MEMO

If no microSD card is in the unit, you can still record one file of up to 35 seconds using the unit's built-in memory. Be aware that recording again without a card will overwrite the recording already in the built-in memory.

Operate Delete

You can delete recorded audio files.

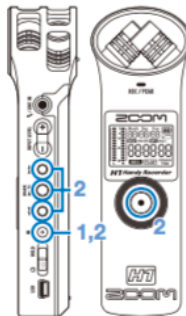

1. Press  during playback of the file that you want to delete.



2. Press  to confirm. Press ▶/||, ◀▶, or  to cancel deletion.

Scan This QR Code for the full user manual or visit avsupport.trinitylaban.ac.uk

